


e-Gate TX-4 Remote Control Transmitter

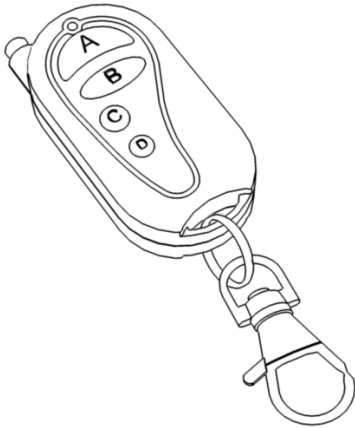

The TX-4 remote control has been designed to fit on a key ring and can be unclipped quickly with the quick release clip if needed.

To use the remote control hold it up vertically or let it hang upside down from a key ring. It doesn't need to be pointed in any directly like a TV remote.

Getting the first remote control to work

You must have access to the receiver to get the first remote control to work, refer to the receivers instructions on how to do this.

Adding extra remote controls to an existing system

For any e-Gate operator or other operator that has an RX-1 or RX-2 receiver fitted, extra remote controls can be added without gaining access to the receiver, so you don't need to unscrew the lid from any control boxes, all you need is one working remote control within range of the receiver.

To do this press buttons A and C at the same time on the working remote control and the receiver will start beeping, then press the button on the New Remote Control and the receiver will beep rapidly for a second to confirm the new remote control has been added.

Buttons A and C work for RX-1 receivers and Channel 1 for RX-2 receivers. Buttons A and D are for Channel 2. For e-Gate control boards or Gate Operator Systems, buttons A and C activate open with Manual Close, buttons A and D open with auto-close and buttons B and D are for Pedestrian entry.

Changing the Battery

The remote control uses a 12V Thin Battery 8mm diameter x 28mm long L828 type.

